



WinMATE E430T User Guide

Android 2.3.4

Contents

Chapter 1: Safety Information

Exposure to Radio Use	3
RF Exposure Information	3
Battery Safety Information	4
Electrostatic Discharge	4
Driving	4

Chapter 2: About Winmate E430T Series

About E430T	5
Features	5
Getting started.....	6
Sim Card and SD Card Installation	7
Battery Installation	8
Battery Charging	8
Turning On and Off the Device	9
Turning the E430T On	9
Turning the E430T Off	10
Resetting to Factory Defaults	10

Chapter 3: Using Android 2.3.4 Operating System

Wake Up the Phone	11
Using the Touch Screen	11
Using the Home Screen	11
Personalizing Home Screen	12
View other parts of the Home Screen	13
Status and Notification Icons	15
Using the Menu	16
Using the On-Screen Keyboard	16
Enter Text by Typing	16
Editing Text	17
Display Setting	18
Audio Profile Setting	19
Sounds Setting	19

Adjust Volume	19
Language & Keyboard Setting	19
Change the keyboard language.....	20
USB Debugging Setting	20
Using the Phone.....	21
To Make a Phone Call.....	21
To Make a Phone Call Using Contact List	22
Answering or Declining Calls	22
Messaging.....	22
Send a Text Message.....	22
Open and Respond to Text Message	23
About Phone	23

Chapter 4: Connecting to Network and Devices

Connecting to Mobile Networks	24
Determine the GSM Networks	24
Limit User Data Connection to 2G Networks.....	24
Connecting to Wi-Fi Networks	24
Turn On the Wi-Fi and Connect to a Wi-Fi Network.....	24
Add a Wi-Fi Networks.....	25
Connecting to Bluetooth Devices.....	26
Turn Bluetooth On or Off	26
Connect to a Bluetooth Device	26
Disconnect from a Bluetooth Device.....	26
Connecting to Computer via USB.....	27

Chapter 5: Using the Camera

Open Camera	28
Take a Picture	28
Switch between Front and Back Cameras.....	28
Shoot a Video.....	29

Chapter 6: Accessories

E430T Standard Accessories	30
E430T Optional Accessories	30

Chapter 01

Safety Information

This chapter describes safety issues. Including :

- **Exposure to Radio Use**
- **RF Exposure Information**
- **Battery Safety Information**
- **Electrostatic Discharge**
- **Driving**

Chapter 1: Safety Information

Exposure to Radio Use

E430T series is equipped with Bluetooth, WI-Fi and Cellular modem radio. In some situation or area, user may be required to turn off the radios. For example;

- User's needs to turn the phone OFF when in an area posted "TURN OFF RADIO SIGNAL." to avoid interfering with blasting operations.
- User needs to turn OFF the radio signal in health care facilities. Hospitals or health care facilities may be using devices that sensitive to Radio Frequency energy.
- Aviation authority regulations prohibit user from using phone while in the aircraft.

In order to prevent the handheld from emitting radio signals, do the following step:

- To turn off the device:
Press and hold the power button to display the *Phone Options* menu for 3 sec then tap the **Power Off**
- To set the device into airplane mode:
Press and hold the power button to display the *Phone Options* menu for 3 sec then tap **Airplane mode**
- To turn off the Communication options e.g. Bluetooth, Wi-Fi, cellular modem radio:
Select **MENU**, tap **Setting**, and then tap **Wireless & networks**.
If any radios are on, tap them to uncheck all the radios' checkboxes in the devices

RF Exposure Information

This PDA meets the government's requirement for exposure to radio waves. This PDA is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S.

Government. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/Kg.

Test for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

Although SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the PDA is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer user to a wireless base station antenna, the lower the power output.

For body worn operation, this PDA has been tested and meets the FCC RF exposure guidelines for use with an accessory that contains no metal and the positions of the handset

minimum of 1.5 cm from the body. User of other enhancements may not ensure compliance with FCC RF exposure guidelines. If user do not use a body-worn accessory and are not holding the PDA at the ear, position the handset a minimum of 1.5 cm from your body when the device is switched on.

Battery Safety Information



Do not use other battery which is not intended for the product. Use only the battery compatible for the device and follow battery usage, storage, and charging guidelines in this user guide.



A damage rechargeable Lithium-ion polymer battery can cause explosion or fire. To prevent personal injury and/or property damage:

- Do not open, disassemble, puncture, or crush the battery
- Do not leave or store the PDA in an area which is near a heat source such as vehicle dashboard, dryer or other heat source.
- Do not attempt to insert foreign object into the battery or allow conductive objects to contact the battery

In the event of battery leak:

- Do not have any contact with the battery fluid
- If battery fluid leaks onto the skin or cloth, wash the affected area with clean water



Please contact your current Winmate distributor or local Winmate vendor if you suspect damage to your PDA or battery for inspection and reparation.

Electrostatic Discharge



Please follow proper electrostatic discharge precaution to prevent static damage that can harm electronic components inside your device

Driving



Using mobile device or accessory while driving may cause distraction and maybe illegal in some areas where you drive. Please obey the laws and regulations on the use of mobile device

Chapter 02

About Winmate E430T Series

This chapter describes the information regarding E430T Series.

Be sure to read all the instructions to complete the installation procedure

Chapter 2: About Winmate E430T Series

About E430T





Winmate E430T Industrial PDA is based on the Texas instruments DM3730 processor running at 1 GHz. This device is an OMAP compatible package with an ARM Cortex-A8 core and powerful graphics accelerator. The 4.3-inch capacitive multi-touch display offers 480 x 800 pixel WVGA resolution. Other new era tech includes dual cameras, a micro-SD card slot, speedy 802.11 Wi-Fi, integrated GPS and optional 3G mobile broadband.

Features

This section provides the features of the E430T series and describes how to set this device for the first time



Features

1	Earpiece	Use to listen during phone conversation
2	3.5 mm headset connector	Use to connect a headset
3	Webcam	To capture a front view picture and use for Video call
4	Proximity & Light Sensor	Proximity function is used specifically towards near field proximity applications. In mobile phones, the proximity detection can detect when the user positions of mobile phone is close to their ear Light sensor detect the availability of light and automatically control the brightness of a screen backlight intensity
5	IR (optional)	Use for sending and receiving infrared signals
6	LED indicator	LED indicator indicates the battery power or charging status
7	Power Button	Press and hold the button for 3 seconds to turn on E430T Press to turn on/off the screen Press and hold the button for 3 seconds to select: <ul style="list-style-type: none"> • Disable the keyboard -- to disable all the 4-capacitive keys • Silent mode -- to disable all the sounds except for the alarms • Airplane mode -- to disable all wireless connection • Power Off -- to turn off the E430T press button for 8 Sec to force system power off
8	Function Key	Use to trigger the barcode reader for E430T series with barcode reader
9	Volume Up / Down	Increases or decreases the call volume when a call is in progress. In other applications, it controls the volume of music or other audio
10	4.3" Touch screen	Display all information needed to operate E430T
11		Opens the home screen with single touch Opens the most recently used application screen
12		Opens a menu with items that affect the current screen or application
13		Opens the previous screen and to close onscreen keyboard if it is open
14		Opens the search widget for searching the web, applications, and contacts
15	Micro USB	Use for charging and communication
16	Microphone	Use for making a phone call or voice recordings
17	Speaker	Provides audio output for music and video
18	LED	Use it as a flashlight
19	5 MP Rear Camera	Takes photos or record videos

Getting started


To start using the E430T for the first time:

- Install SIM Card and SD Card
- Install the battery
- Charging the Battery


Sim Card and SD Card Installation

To Install the SIM Card and SD Card:


1. Place the E430T facing down and then locate the screws on the backside
2. Unscrew the screws and gently pull the back cover

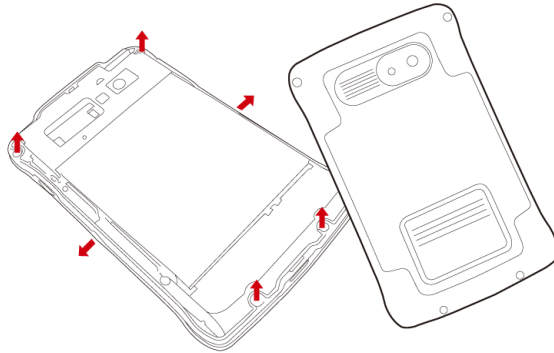




3. Pull the plastic strap and then remove the battery

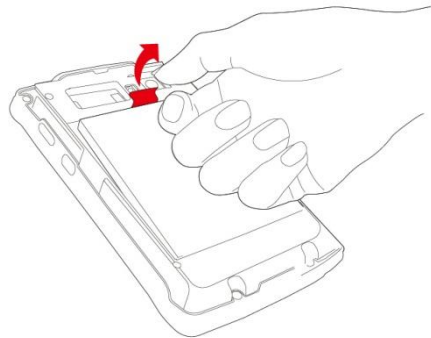

4. Locate the SIM card holder
5. Insert the SIM card (with the gold parts facing down and cut-off corner facing out) in the direction of the arrow as shown in the figure

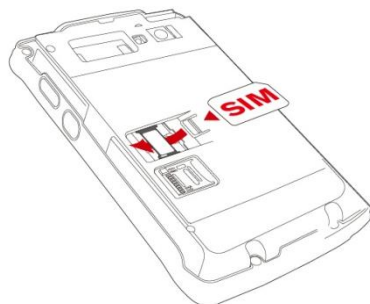


6. Locate the SD card holder
7. Push the SD card holder in the direction of the arrow to unlock it.

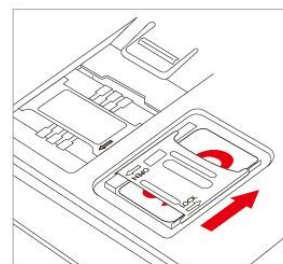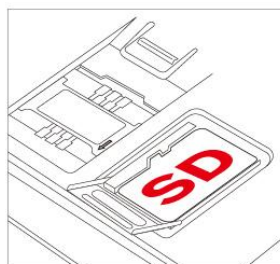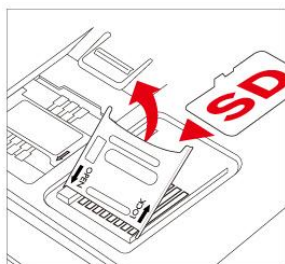

8. Pick and raise the SD card holder up in upright position and then put the SD Card into the socket
9. Close the SIM card holder and push it into lock position until there is a click sound



Battery Installation

1. Reinsert the battery by latching the bottom first and then push it down.

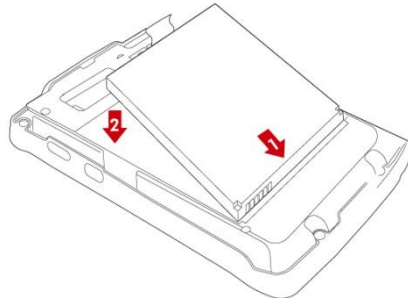

2. After battery installation, put back the back cover and make sure all the 6 screw holes fit. Screw and fix the back cover by using gentle torque of 2 Kg

Check the Sealing

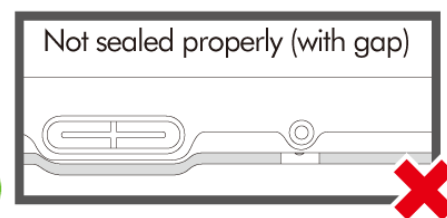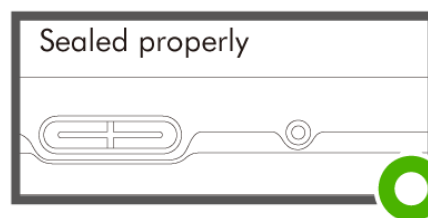


Battery charging

Please charge the battery before using the PDA for the first time, charge the battery until the LED indicator turns solid green. To charge the E430T, use a cable or a docking with appropriate power supply. For more information about the E430T accessories, see [chapter 6](#).

To charge the battery using USB/ Charge cable:

1. Connect the power supply output connector to the input power port on the USB/Charge cable.
2. Remove the protective rubber and connect the USB/ Charge cable to the bottom of E430T. The battery charge LED indicates the battery charging status

LED Status	Indication
OFF	E430T is not charging or not properly connected
Solid Red	Low battery
Solid Orange	Charging in progress
Solid Green	Charging complete

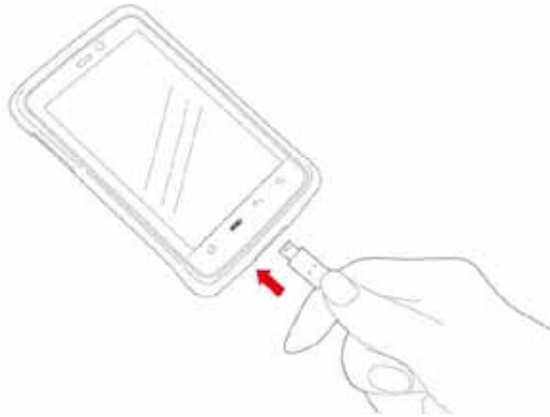

This product uses a non-removable battery. The battery should only be removed when you want to change the SD Card or SIM Card

To charge the battery using Docking:

1. Connect the docking to power, Insert the E430T into the slot to begin charging
2. The E430T LED indicator indicates the status of the battery charging



This docking provides Input: 12V/36W DC in

Remove the screen protector

The E430 has 3 screen protectors on the front screen, rear camera lens and top sensor lens (Optional). Please remove the screens protectors to avoid the image quality affected.

Turning On and Off the Device

Turning the E430T On

1. Press and hold the power button for 3 seconds, located on the right side of the unit



2. When the device vibrates, release the power button
The desktop screen is displayed

Turning the E430T Off

1. To turn off the device, press and hold the power button until the phone options menu appears, tap the **Power off**.
2. User can also use the Phone options menu to put the device into silent or airplane mode, see features table.

Resetting to Factory Defaults

To reset the device to factory defaults:

1. Tap **MENU**, than tap **Settings**
2. Locate **Privacy** and then tap it
3. Tap **Factory data reset**, user can select to back up application data, Wi-Fi passwords and other settings to Google servers by tapping **Back up my data**.
4. If it requires password, insert **0000** as the password for reset to factory default



Note

Performing a factory data reset does not delete any system software updates

Chapter 03

Using Android 2.3.4 Operating
System

Chapter 3: Using Android 2.3.4 Operating System

Wake Up the Phone

If you do not use the phone for a while, the screen dims and then darkens to conserve the battery. To wake up the phone:

1. Press the **Power** button on the side of the PDA.
2. Drag the lock icon to the right




Using the Touch Screen

To gain full access of the Android interface is by using your finger to manipulate icons, on screen keyboard, menu items, and other items on the touch screen.

- *Tap* – Simply touch the icon, symbol, or onscreen button using your finger
- *Tap and hold* – Touching an item using your finger and not lifting it until an action occurs
- *Drag* – Touch and hold an item for some amount of time and then, without lifting your finger, move your finger along the screen until you reach target position
- *Swipe or slide* – Quickly move your finger across the surface of the screen, without pausing it when you first touch it. (e.g. scroll a page or a list up or down)
- *Double tap* – Tap quickly twice on a webpage, map, or other screen to zoom. Double tapping after pinching the zoom in some application to fit the width of the screen
- *Pinch* – Place two fingers on the screen at once and pinching them together (to zoom out) and spreading them apart (to zoom in).
- *Rotate the screen* – Orientation of the screens rotates with the phone as user turn it from upright to its side and back again.

Using the Home Screen


Home screen is the starting point to access all the features on your PDA Device. It displays application icons, widgets, shortcuts, and other features. User can personalize the home screen. See “Personalizing home screen”

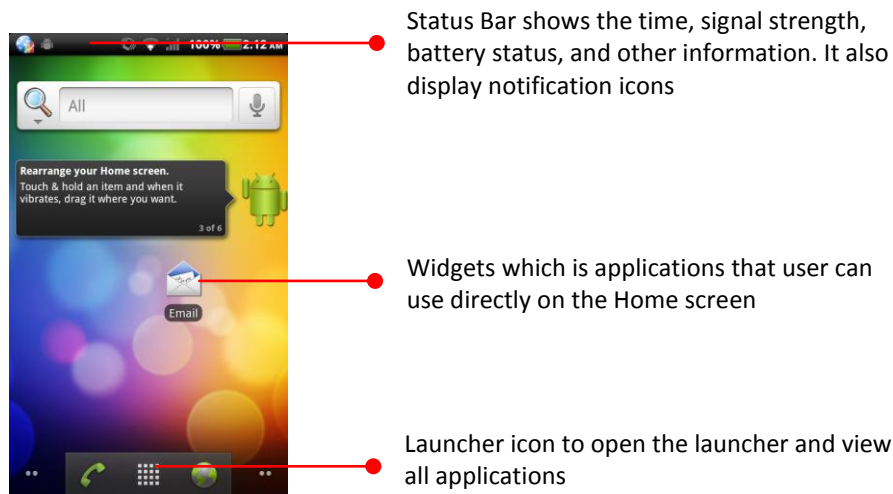


Personalizing Home Screen

User can add application icons, shortcuts, widgets, and other items to any part of any Home screen where there is free space. User can also switch the wallpaper.

To add an item on the Home screen:

 1. Tap **MENU** and then tap 
2. On the menu that opens tap the type of item you want to add.

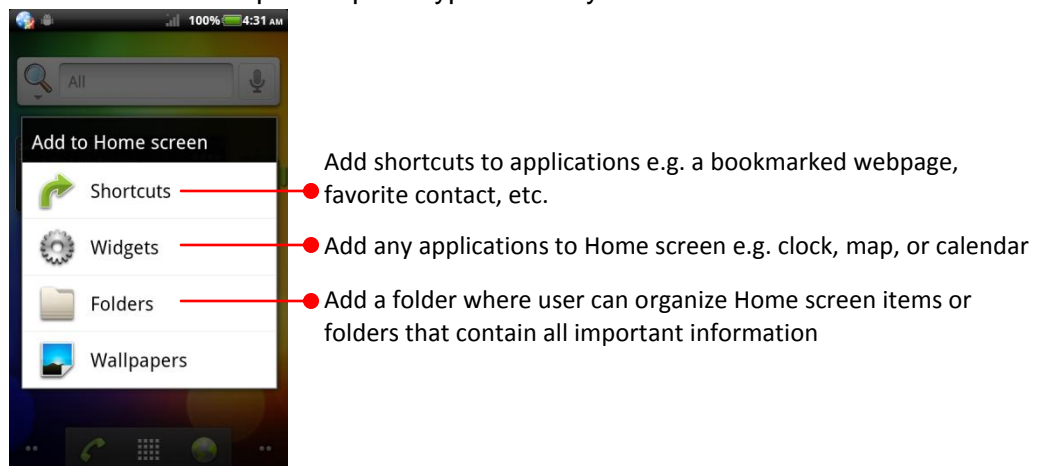

To move an item on the Home screen:


1. Tap and hold the item you want to move, until it can be moved.
2. Drag it to a new location on the screen
3. Place the item where you want to put it and lift your finger



Move a widget (Compass) to Home screen

To remove an item from the Home screen:

1. Tap and hold the item you want to remove. The launcher icon will change into a trash can icon
2. Drag the item you want to remove to the trash can icon
3. When the icon turns red, release your finger

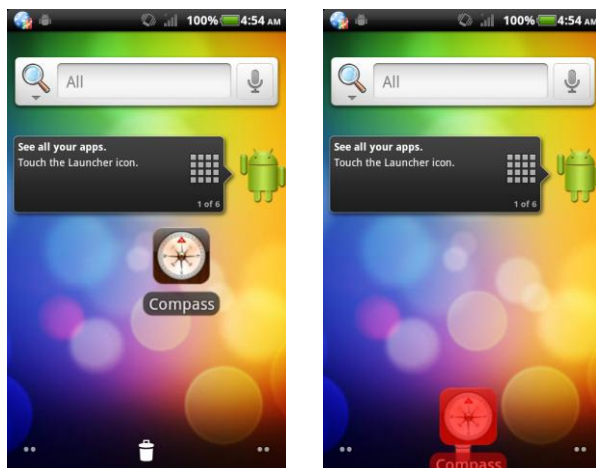

To rename a folder:

1. Tap the folder to open it
2. Tap and hold the folder window's title bar
3. Enter a new name in the dialog box that appears
4. Tap **OK**.

View other parts of the Home Screen

1. Slide your finger left or right across the Home screen
Extensions to the Home screen provide extra space for widgets, shortcuts, and other items.
Small dots at the lower left and right on the Home screen indicate which screen you are viewing



2. Tap and hold the launcher icon to view the entire parts of the screen, which you can touch to open.



Status and Notification Icons

The status bar appears at the top of every screen. On the left are notification icons and on the right are status icons, along with the current time.





























Notification icons

Status icons

Status Icon









 



 


 





 






The following icons indicates the status of your PDA, for example if users are connected to a Wi-Fi network that is not connected to the internet, the network icons are appears in white color

Status icons that appear in the status bar are as follows:

	Connected to GPRS mobile network		Roaming
	GPRS in use		No signal
	Connected to EDGE mobile network		No SIM card installed
	EDGE in use		Vibrate mode
	Connected to 3G mobile network		Ringer is silenced
	3G in use		Phone microphone is mute
	Mobile network signal strength		Battery is very Low
	Connected to a Wi-Fi network		Battery is Low
	Bluetooth is ON		Battery is partially drained
	Connected to a Bluetooth		Battery is Full
	Airplane mode		Battery is charging
	Alarm is set		GPS is ON
	Speakerphone is on		Receiving location data from GPS

Notification Icon

  
The following icons indicate that you have received notification

	New Gmail message		More notifications
	New text or multimedia message		Call in progress
	Problem with text or multimedia message delivery		Call in progress using a bluetooth headset
	New google talk message		Missed call
	New voicemail		Call on hold
	Upcoming event		Call forwarding ON
	Data is syncing		Song is playing
	Problem with sign-in or sync		Uploading data
	SD Card or USB storage is full		Downloading data
	An open Wi-Fi network is available		Download finished
	Device is connected via USB		Connected to or disconnected from Virtual private network (VPN)
	Phone is sharing its data connection via USB (USB tethering)		Carrier data use threshold approaching or exceeded
	Phone is sharing its data connection as a Wi-Fi hotspot (Wi-Fi tethering)		Application update available
	Phone is tethered in multiple ways		System update available

Using the Menu

In Android 2.3.4 platform there are two kinds of menu: **Options menus** and **Context menus**

- **Options menus** contain tools that apply to the activities of the current screen or application, not to any specific item on the screen. To open **Options menus**, press **MENU**. Not all screens have options menus; if you press menu that has no options menu, nothing happens. Options menu contain items that apply to the current screen or to the application as a whole

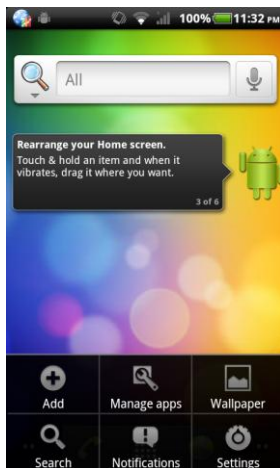


Options menus contain items that apply to the current screen or to the application as a whole


- **Context menus** contain tools that apply to a specific item on the screen. To open it, tap and hold an item on the screen. Not all items have context menus. If you tap and hold an item that has no context menu, nothing happens

Using the On-Screen Keyboard

User will be able to enter text using the On-Screen Keyboard. Some applications will launch the keyboard automatically. In others, user needs to touch a text field where user wants to enter text to launch the keyboard.

Enter Text by Typing

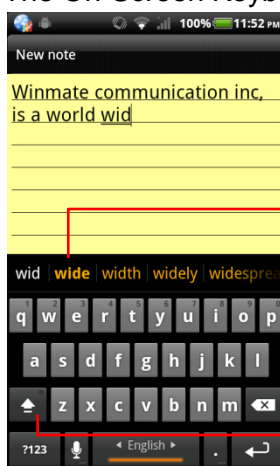


1. Open a text field, in this example we used memorandum  to create a note. The On-Screen Keyboard opens.





Tap a suggestion to enter it in place of the underlined word in the text box.


Tap once to capitalize the alphabet


If user taps in a text field which already contains text, the insertion point is set where user tap and the cursor appears. User can drag the cursor to pick exactly where you want to add more text. User can also select a word to copy, cut and paste it. See “Editing Text”


2. Tap the delete key  to erase characters to the left of the cursor
3. Tap  to enter numbers. Tap  to return to letters
4. To enter symbols and other characters, tap and hold one of the top-row keys and slide your finger up to the list of the options. Lift your finger when you find your selection.

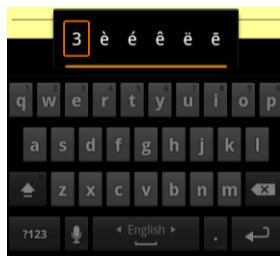

5. To view additional symbols, tap  on the numeric keyboard.

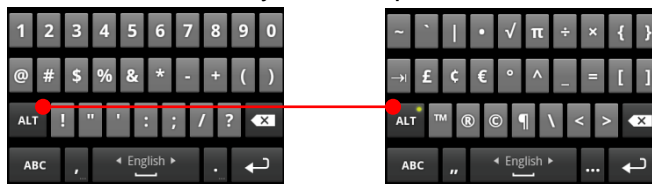

6. To open a small window with a set of common symbols, tap & hold the periode key .

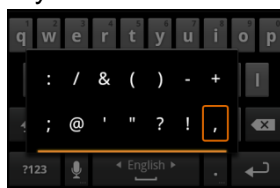


7. To close the On-Screen keyboard, tap the back button 

Editing Text

To select text

1. Tap the text you want to select
2. Tap **Select word** or **Select all** in the menu that appears, the selected text is highlighted in orange, with a tab at each end of the selected word
3. Drag selection tab to expand or reduce the range of the selected text

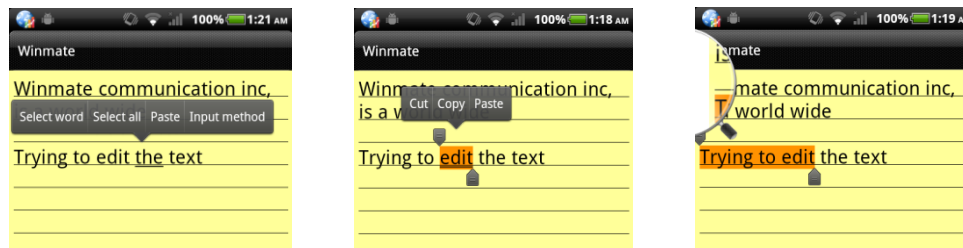


To Cut or Copy Text

1. Select the text to cut or copy, see “to select text”
2. Tap **Cut** or **Copy** in the Edit text menu.
3. If you touch **Cut**, the selected text is removed from the text field; it is stored in temporary area so that you can paste it into different text field.


To Paste Text

1. After Cut or Copy the text, see “To Cut or Copy Text”
2. Place the cursor in the text field where you want to paste the text, user can paste text that you copied from one application into a text field in any application
3. Tap and hold into the location that you want to paste, Tap **Paste** in the menu that opens

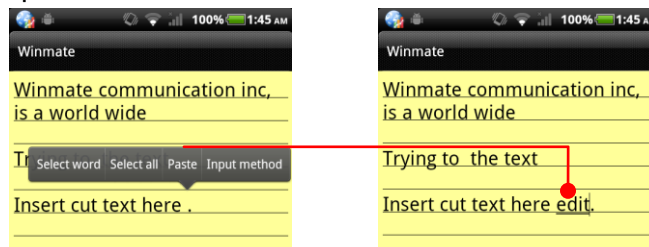


Display Setting

Use the display settings to configure brightness and other screen settings.

1. Tap **MENU** and then tap 
2. Tap **Display** and in the display settings there are:
 - *Brightness* – for adjusting the brightness of the screen.
 - *Auto-rotate screen* – for switching the orientation of the screen as user turn the device sideways or upright
 - *Animation* – for enjoying animated transition for some effects, for all supported effects or without any animation effects
 - *Screen timeout* – for setting how long to wait after user tap the screen or press a button before the screen darkens



 
For the longest battery life between charges, use the shortest convenient timeout

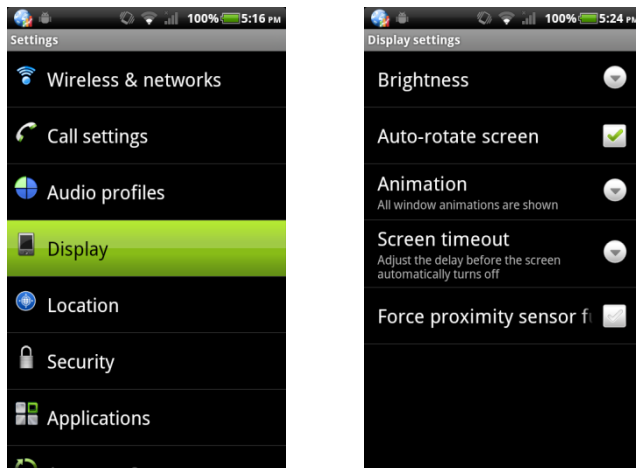


Audio Profile Setting

Use the sound settings to configure how and at what volume the phone rings, vibrates or alerts user in other ways when user receive a call, receive a notification or an alarm sounds.


Sounds Setting

 1. Tap **MENU** and then tap 
2. Tap **Adjust profiles** and then user can select General, Silent, Meeting or Outdoor profile.

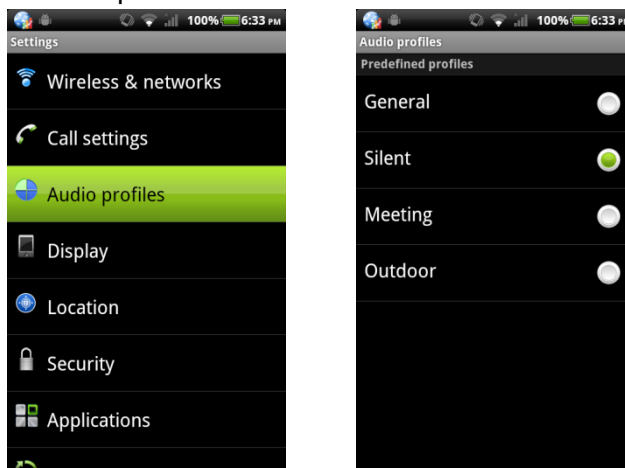

Adjust Volume

1. Press the volume keys to change the ring volume (On Home screen) or earpiece volume (during a call)

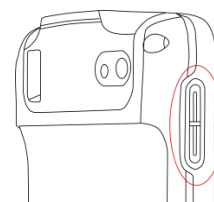

Language & Keyboard Setting


Use the Language & keyboard settings to select the language for the text on your phone and for configuring On-Screen Keyboard, including words that you have added to its dictionary

1. Tap **MENU** and then tap 
2. Tap **Language & Keyboard**

Select language – to open the language screen, where user can select the language to use for the text on the device.

Android keyboard setting screen – to apply the onscreen keyboard that is included with user's device. The correction and capitalization features affect only the English version of the keyboard.

Built in keyboard – the setting screen is available only if user's device has a physical keyboard. There are three options; Auto-replace (check to correct misspelled words), Auto-cap (check to capitalize the first letter of the first word in sentences), and Auto-punctuate (check to insert a period when user press the space key twice in a row)

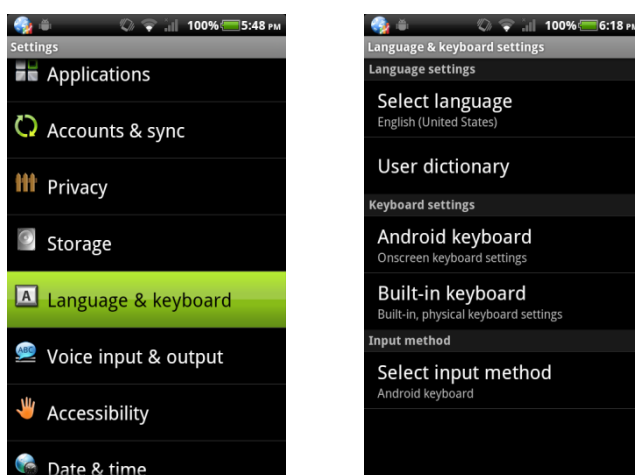

Change the keyboard language



The current keyboard language is displayed on the Space key and user can switch languages.

 
1. Tap and hold the space key
2. Without lifting the finger, slide it to the left or right until the language you want to use appears in the center of the small window above the Space Key
3. Lift the finger to change the keyboard language



USB Debugging Setting

To permit debugging tools on a computer to communicate with User's PDA via USB Connection.

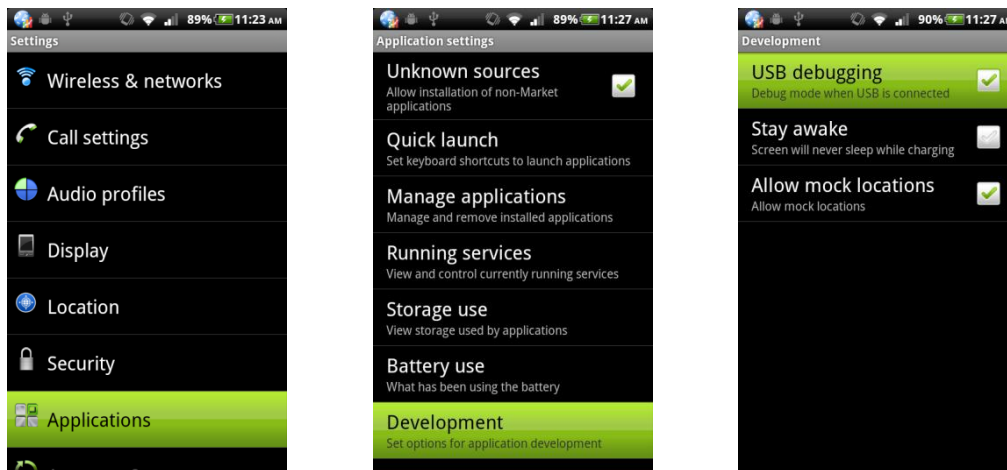


1. Tap **MENU** and then tap 
2. Tap **Applications**  and then tap **Development**
3. Tap **USB debugging**




Using the Phone

User can make a phone call by dialing a phone number; touch a number in the contact list, on the web pages or other places.

To Make a Phone Call

1. Please make sure the SIM card is properly installed
2. Tap the Phone icon  at the bottom of the Home screen or tap the Phone application icon  in the launcher or on the Home screen
3. Tap the numeric keys on the screen to enter the phone number and then tap  to dial the number that you have entered

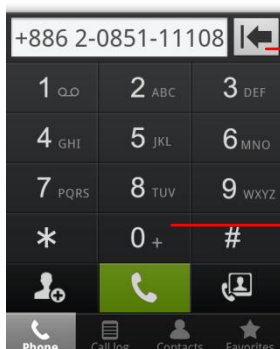


 


If you enter a wrong number, tap this button to erase digits one by one. To erase the entire number, tap and hold this button

Tap and hold to enter +

 
4. Adjust the call volume by pressing the volume up / down button on the side of the PDA device

To Make a Phone Call Using Contact List

1. Tap the **launcher**  and then tap **Contacts** 
Or
2. Tap the Phone icon  at the bottom of the Home screen and then tap the Contacts 
3. Select the required contact and then tap it to call



Answering or Declining Calls

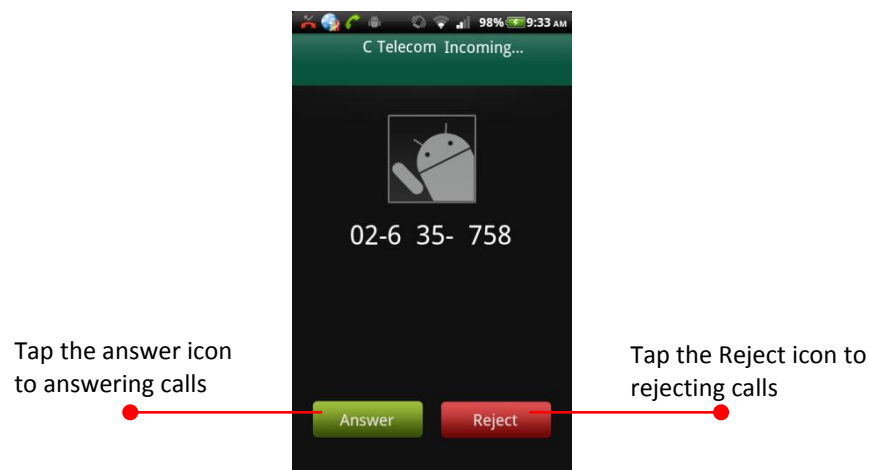
When user receive a phone call, the incoming call screen opens with the caller ID and any additional information about the caller that you have entered in contacts.



Messaging

Send a Text Message

1. Tap the **launcher**  and then tap 
2. Tap Compose new message and enter a mobile phone number in the **To field**. You can tap to find your contact
3. Tap the composition text box to start entering your message

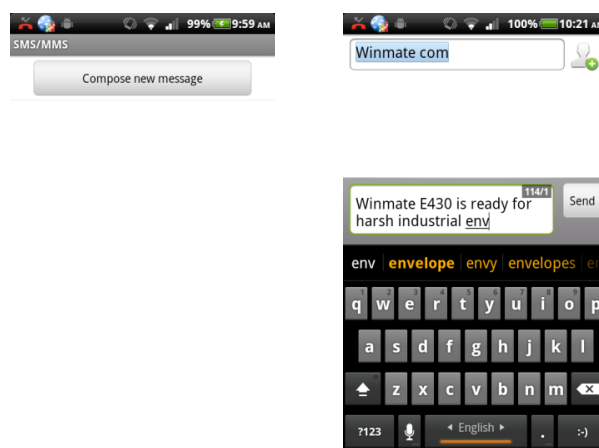

Open and Respond to Text Message

If you are working in a message window, message that you receive are display in it. Otherwise, you receive a new message notification and a new message icon appears in the status bar.

To reply a message

When user tap the new message notification, the message window opens and user can reply the message

To forward a message

1. Tap & hold a message in a message window
2. Tap **Forward message** in the menu that opens
3. Enter a recipient for message and edit the content if necessary
4. Tap **Send**

About Phone

About Phone includes information about user's phone

 
Status — opens the status screen with a list of information about battery, network, signal strength and other details

Battery use — opens a list of the applications and operating system components users has used since last charged phone. Sorted by the amount of power user has used

Baseband Version

Kernel Version

Identification Number — lists details about the model number; this information is useful if you need to work with your support team.

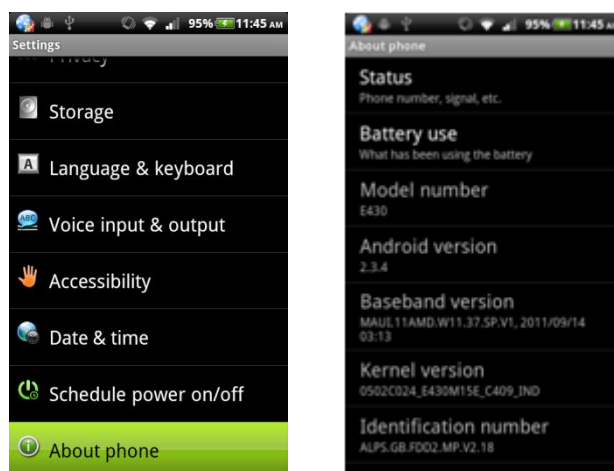

Chapter 04

Connecting to network and Devices

This chapter describes how we can connect the E430T to

- Mobile network
- WiFi network
- Bluetooth Devices
- Computer via USB


Chapter 4: Connecting to Network and Devices

Connecting to Mobile Networks

When users assemble their PDA with a SIM card from service provider, their phone is configured to use their provider networks for voice calls and for transmitting data.

Different locations may have different mobile networks available; user may need to configure their phone to use certain networks. To obtain fastest networks user can configure their phone to 4G and to extend the life of battery user can use 2G network.

Determine the GSM Network











1. Tap **MENU** and then tap .
2. Tap **Wireless & networks**, and then tap **Mobile networks > Access Point Names**.
The name of the wireless service provider is available in the list

Limit User Data Connection to 2G Networks

1. Tap **MENU** and then tap .
2. Tap **Wireless & networks**, and then tap **Mobile networks > Use only 2G networks**.


When connected to 2G network, postpone activities that transmit a lot of data is recommended, until user are connected to a faster mobile or other wireless network

The status bar displays icons that indicate mobile network status.

	Connected to GPRS mobile network		Roaming
	GPRS in use		No signal
	Connected to EDGE mobile network		No SIM card installed
	EDGE in use		Mobile network signal strength
	Connected to 3G mobile network		3G in use

Connecting to Wi-Fi Networks


Turn On the Wi-Fi and Connect to a Wi-Fi network

1. Tap **MENU** and then tap .
2. Tap **Wireless & networks** and then tap **Wi-Fi settings**
3. Select Wi-Fi to turn it on

The device scans for available Wi-Fi networks and displays the list of it. Secured networks are indicated with a lock icon 


If the phone finds a network that you have connected previously, it connects to it automatically.

4. Tap a network to connect to it;
 - If the network is open, you are prompted to confirm that you want to connect it by tapping **Connect**
 - If the network is secured, users are prompted to enter a password or other credentials
5. To check the details about the speed, security, address and related settings, tap its name in the Wi-Fi settings screen

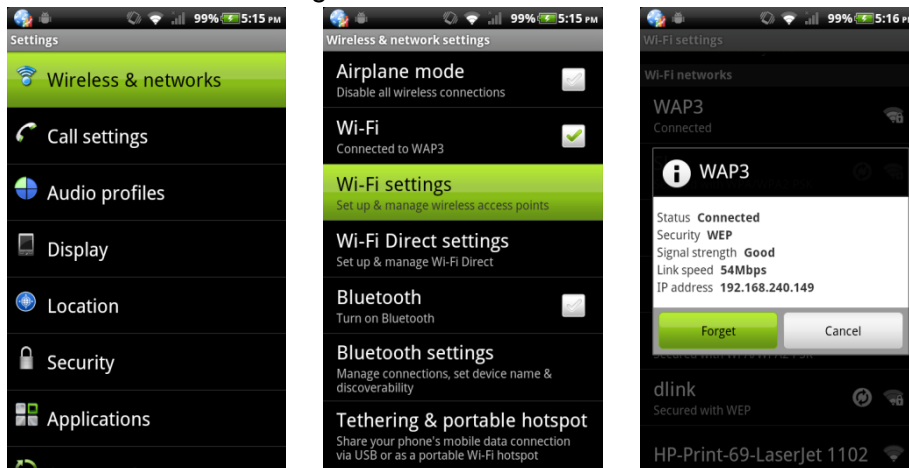


Add a Wi-Fi Network

 1. Turn on Wi-Fi, in the Wi-Fi settings screen, tap **Add Wi-Fi network** (at the bottom of the list of discovered networks)
2. Input the SSID (name) of the network, if the network is secured, tap the security menu and then tap the type of security deployed on the network.
3. Enter any required security credentials
4. Tap **Save**

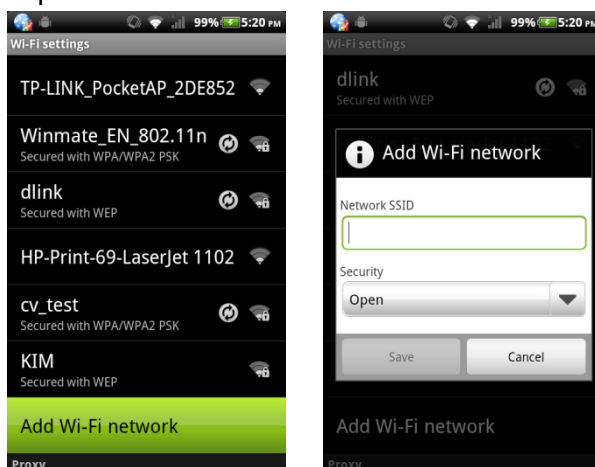

 
The status bar displays icons that indicate Wi-Fi status.




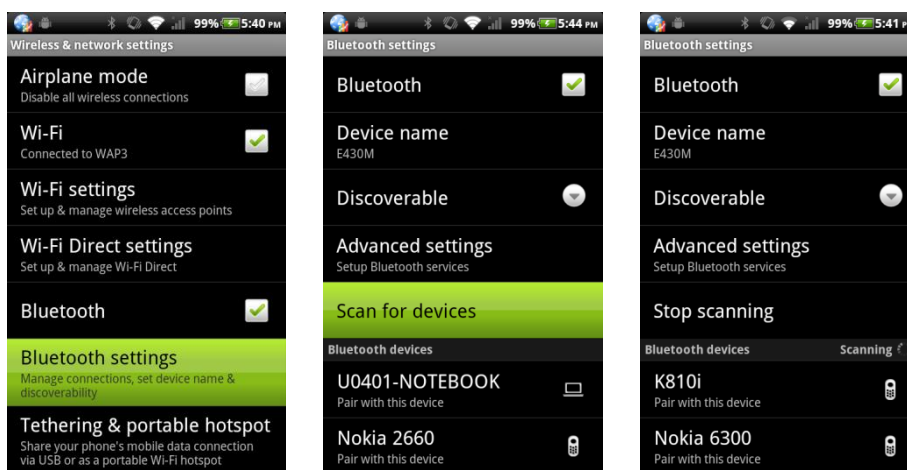
Connecting to Bluetooth Devices

Turn Bluetooth On or Off

1. Tap **MENU** and then tap .
2. Tap **Wireless & networks**
3. Check or uncheck **Bluetooth** to turn it on or off.

Connect to a Bluetooth device

1. Tap **MENU** and then tap .
2. Tap **Wireless & networks**, and then tap **Bluetooth settings**
3. Tap **Scan for devices** to scans and displays the IDs of all available Bluetooth devices in range. Tap **Stop scanning** to stop scan for device
4. Tap the ID of the other device in the list in Settings to pair them



Disconnect from a Bluetooth device

1. Tap the device in the Bluetooth settings screen
 2. Tap **OK** to confirm that you want to disconnect
- The status bar displays icons that indicate Wi-Fi status.




Connecting to Computer via USB

User can connect their PDA to a computer with USB cable to transfer files between PDA and computer





When connecting your PDA to a computer and mounting its USB storage or SD card, user must follow the computer's instructions for connecting and disconnecting USB device, to avoid damaging or corrupting files.

To connect your PDA to a computer via USB:

1. Use the USB cable that came with your PDA to connect the phone to a USB port on your computer
 2. After received a notification that the USB is connected, tap the notification panel and then tap **USB connected** 
 3. Tap **Turn on USB storage** in the screen that opens to confirm that user wants to transfer files.
- When the phone is connected as USB storage, the screen indicates that USB storage is in use and user will receive a notification



Carefully follow your computer's instructions to un-mount the USB storage or SD card. Disconnect USB device not properly can cause a loss of important data or information.

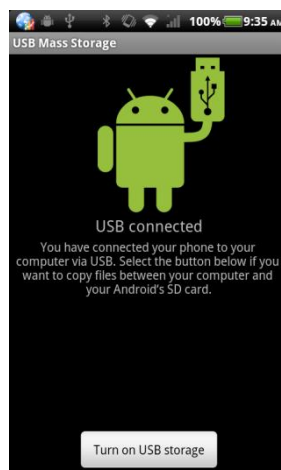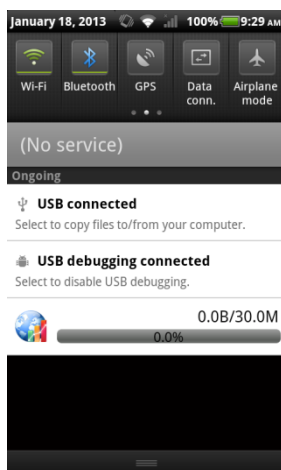

To disconnect your PDA from the computer:

1. Open the Notifications panel and tap **USB connected**
2. Tap **Turn off USB storage** in the screen that opens



Chapter 05



Using the Camera

This chapter describes all the information about E430T Camera

Chapter 5: Using the Camera

Winmate E430T equipped with 5 MP on the rear side and 2 MP on the front side, which user can use to capture photos or video

Open Camera


1. Tap the **launcher**  and then tap **Camera** 
Camera opens in Landscape mode, ready to take a picture or shoot a video





Make sure the protective lens cover is clean before taking pictures. A lens cover with smudges from fingers can cause blurry picture


Take a picture

1. Adjust the exposure, flash, and other necessary settings. Or leave it automatic.
2. Frame your subject / object on screen

User can set whether user want to use the front or rear camera, by tapping 


Tap Zoom icon  to zoom in or out and then tap a zoom level

3. Tap the On Screen Shutter icon 
The camera brings the image into focus, when the image is in focus, the focus indicators in each corner will turn green and ready to capture
4. Touch the thumbnail to view, share, or work with your pictures in Gallery

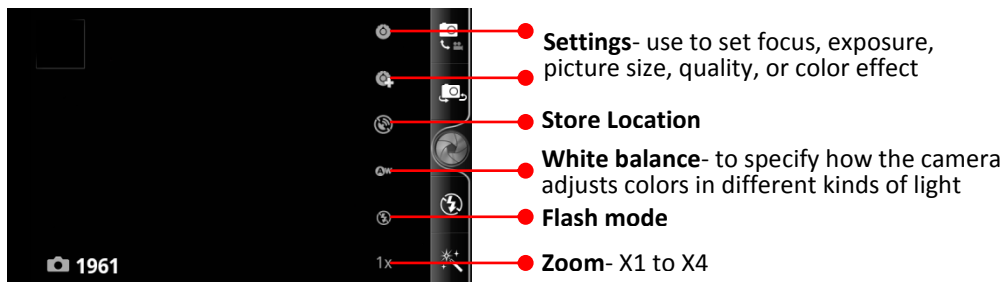

Switch between front and rear cameras




E430T has both a front and rear camera, user can select which camera you want to preview and take pictures with.


1. Tap the On Screen Select Camera icon to switch between the rear camera and the front camera 
2. The preview switches to show the scene viewed from the camera you selected.



Not all features (such as flash) are available for the front camera

Shoot a video

1. Tap  to switch from camera to video mode
2. Point the lens to record the scene where you want to start
3. Tap the On Screen Start Video  icon
The time remaining to shoot counts down at the left; when less than a minute is left, the countdown turns red
4. Tap the  icon again to stop shooting

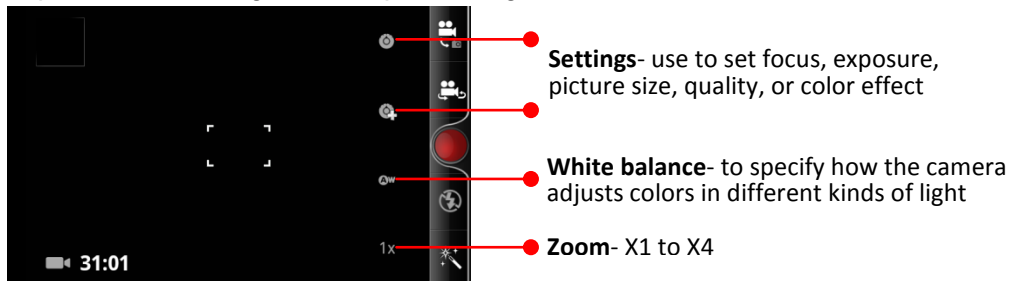

Chapter 06

Accessories

This chapter describes the accessories for E430T

- E430T standard accessories
- E430T optional accessories

Chapter 6: Accessories

E430T Standard Accessories

Standard Accessory	Part Number	Details
Universal USB Adapter	922Z005W05V1 USA 922Z005W05V4 EU 922Z005W05V2 UK 922Z005W05V3 AUS	Input : AC 100-240V 50/60 Hz Output : 5V-1A
Micro USB Cable	9487049050K0	Provides power to the E430T and USB communication with a host computer
Bluetooth Manager	95LT00000012	Provides an ease of use interface for managing the Bluetooth
Micro SD Card	76G004300000	4GB Micro SD Card
Screen protector	9116043K1700	Protect touch screen against dirt and water
Quick Start Guide		

E430T Optional Accessories

Optional Accessory	Part Number	Details
Micro USB Host Cable (OTG Cable)	9480058040K0	Provides OTG function and acting as a host allowing a USB flash drive to be attached
Micro SD Card		Provides capacity size from 8-32G
Hand Strap	9B0000000317	Secure the device when using it
Vehicle Adapter	9260005W05V0	Input 5V DC cigarette lighter socket USB car charger
Vehicle mounting kit	98K000A0001Q	Fix the E430T inside your vehicle
Bluetooth printer	9B0000000266	<ul style="list-style-type: none"> • Mobile thermal receipt printer • Quick and efficient printing • Withstands drop up to 1.2 m • Long lasting battery • Supports wireless communication • Easy to store setup parameters
Office docking	98K000A0001L	Input 12V / 36W DC in
Headset	9B0000000321	Wired plug-in headset for phone use
Soft case holster	9B0000000323	Holster with flap
Mobile Power Station	9A0000000222	5V / 9V / 12V DC Out Capacity : 12000 mAh / 3.7 V